




BCI[®] & AJS[®] Joist – Half Notched Top Flange Near Bearing Repair

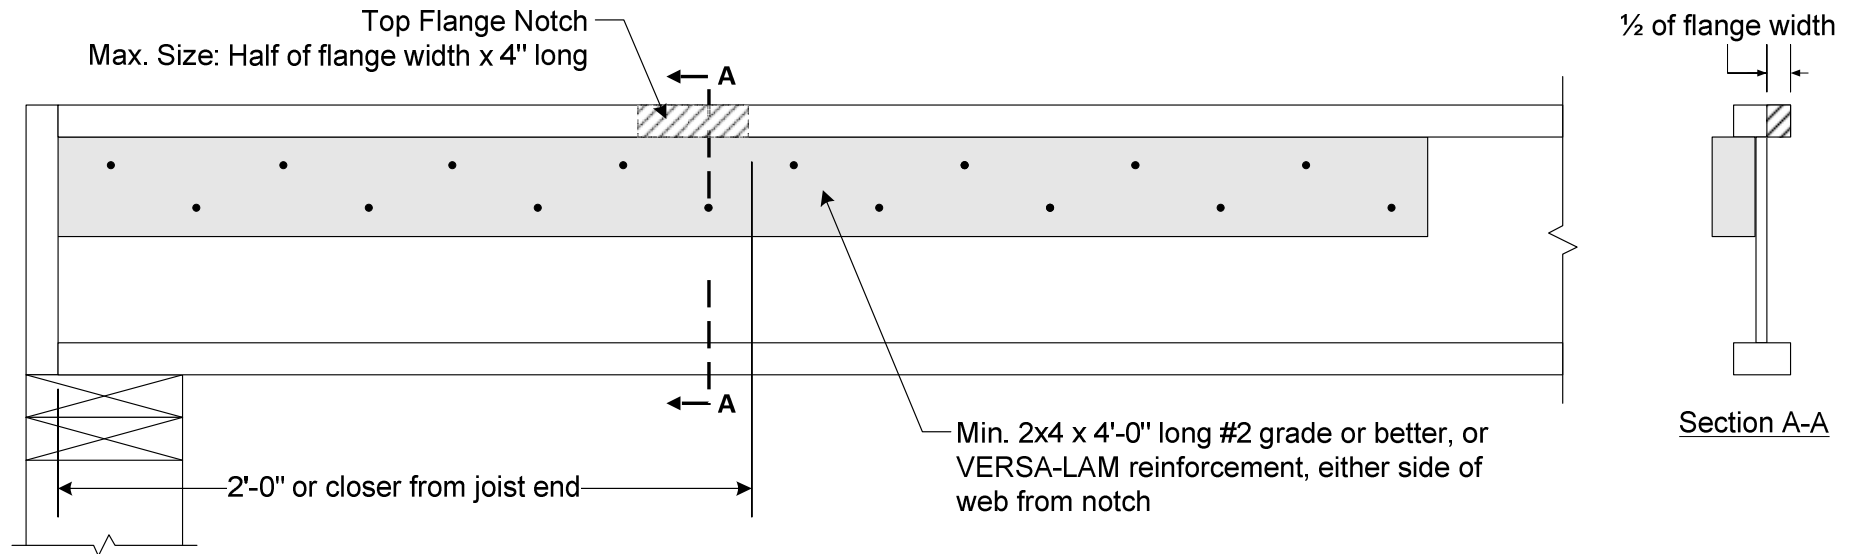

Installation Notes

- 1) Apply construction adhesive to cover all contact surface area.
- 2) Install reinforcement tight to underside of top flange.
- 3) Nail reinforcement with min. 2 rows 10d nails @ 6" o.c., clinched, or 2 rows #8 wood screws @ 6" o.c.
- 4) Repair valid for uniformly loaded joists only.